


# Bridgeton Sanitary Landfill

## June 17, 2013 - June 18, 2013 Air Sampling Locations

### Polyurethane Foam (PUF) Sampling Methods Only

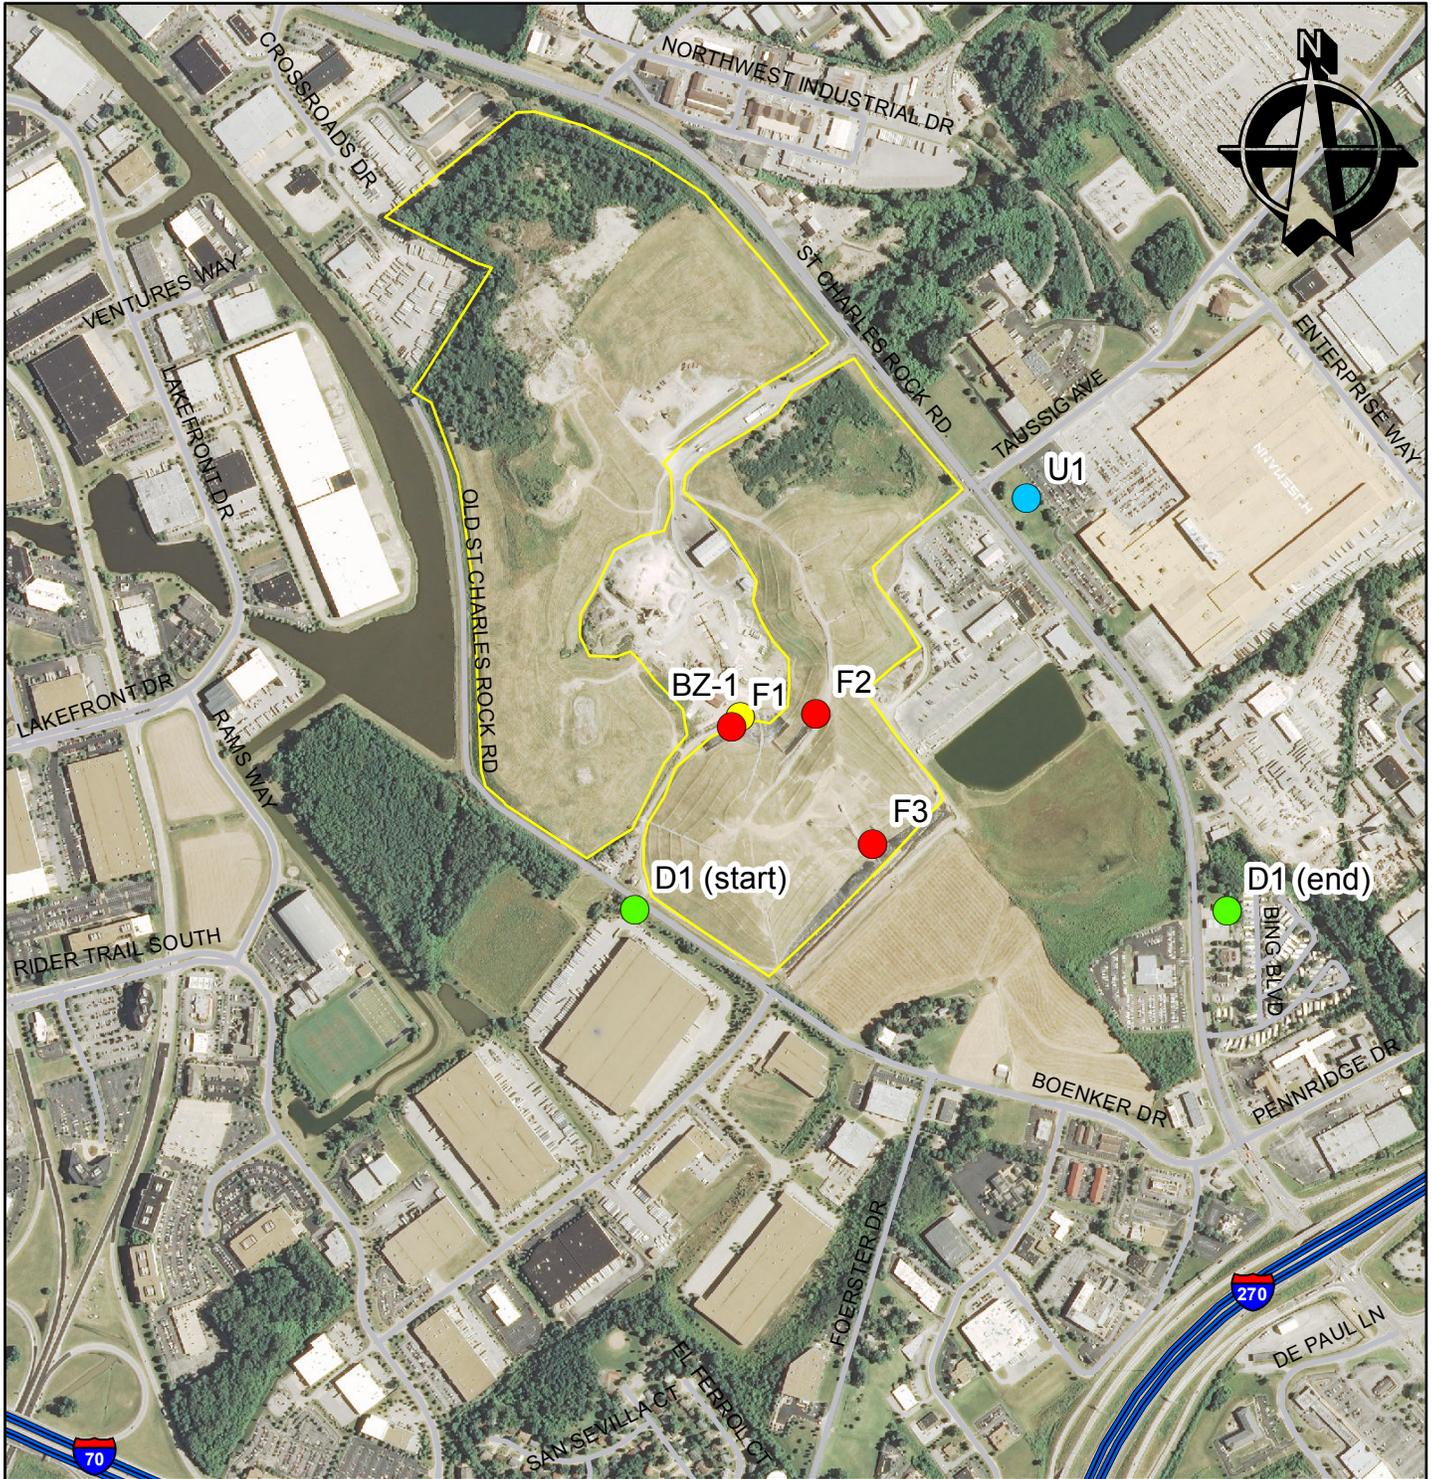

Last Updated 6/23/2013 nrnord



**Missouri Department of Natural Resources**  
**Division of Environmental Quality**  
**Solid Waste Management Program**

0 375 750 1,500 Feet

Although data sets used to create this map have been compiled by the Missouri Department of Natural Resources, no warranty, expressed or implied, is made by the department as to the accuracy of the data and related materials. The act of distribution shall not constitute any such warranty, and no responsibility is assumed by the department in the use of these data or related materials.

#### Legend

- Downwind 24-hour PUF sample
- FML Source Gas 2-hour PUF sample
- On-site 24-hour PUF sample
- Upwind 24-hour PUF sample
- Waste areas (approximate)